



With us, the Future

ESTIC CORPORATION URL http://www.estic.co.jp





Head Office, Osaka Office & International Department 2-5-9 Hashibahigashino-cho, Moriguchi-shi,

Osaka, 570-0031 Japan Phone: +81-6-6993-8835 Fax: +81-6-6993-8881 Email: int_dep@estic.co.jp

Tokyo Office 2F Shinyokohama Bousei Bldg., 3-20-12 Shin-Yokohama, Kouhoku-ku, Yokohama-shi, Kanagawa, 222-0033 Japan Phone: +81-45-474-3036 Fax: +81-45-474-3037 Email: tokyo_office@estic.co.jp

Yamahichi Higashiokazaki Bldg. 2F, 19-13, Kawabata, Myodaiji-cho, Okazaki-city, Aichi, 444-0864 Japan Phone: +81-564-66-0510 Fax: +81-564-66-0515 Email: chubu_office@estic.co.jp

1-2-16 Togodori, Moriguchi-shi, Osaka, 570-0041 Japan Phone: +81-6-6993-8077 Fax: +81-6-6993-8887

SUBSIDIARIES

SHANGHAI ESTIC CO., LTD. No. 6, 51 Gate, 1159 Lane, Kangqiao East Road, Pudong, Shanghai, 201315 China Phone: +86-21-6813-0333 Fax: +86-21-6813-0777 Email: ecc@estic.cn

ESTIC (THAILAND) CO., LTD.

19 Naradhiwas Rajanakarin Road, Chong Nonsi, Yannawa, Bangkok, 10120, Thailand Phone: +66-2-678-0171 Fax: +66-2-678-0173

ESTIC AMERICA, INC. 1895 Airport Exchange Blvd., Suite 220, Erlanger, Phone: +1-859-746-8800 Fax: +1-859-746-8777 Email: support@estic-america.com

The colors of the products may slightly differ from those of the actual products, which is inevitable in printing.

The contents of this brochure are as of Dec 2018




EH2-HT45

TRANSDUCERIZED ELECTRIC HANDHELD NUTRUNNER

Handy 2000 Lite plus+





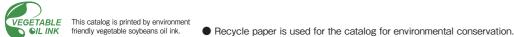



TRANSDUCERIZED ELECTRIC HANDHELD NUTRUNNER

Handy 2000 Lite plus+

The next generation handheld nutrunner "Handy 2000 Lite plus" is designed based on the concepts of quality, environment, ergonomics and versatility.

Estic has supplied the most advanced nutrunner systems to automotive, aviation and other industries and received high evaluations. The electric handheld nutrunner "Handy 2000 Lite plus" is produced by Estic using the finest electronic control, machinery and program technology available. The "Handy 2000 Lite plus" nutrunner is created based on the concepts of high-quality, environmental friendliness, variety system and ergonomic design. It incorporates pulse technology to reduce the reaction during fastening as well as the working load to the operator. The nutrunner is designed to preserve the environment by RoHS compliance and energy saving through electrical operation. Its stable controlling performance achieves the same high quality and accurate fastening as that of larger fixture type nutrunner systems. The innovative handheld nutrunner available only from Estic continues to support production in the future.

QUALITY (ISO5393)

ENVIRONMENT

RoHS compliance

Energy saving

USER ORIENTED SATISFACTION

ERGONOMICS

Pulse fastening

VERSATILITY



INDEX

| 20/12/11 |
|---|
| ENVIRONMENT4 |
| ERGONOMICS5 ~ 6 |
| NGLE TOOL & STRAIGHT TOOL7 ~ 8 |
| PISTOL TOOL 9 ~ 10 |
| OW TORQUE ADAPTATION TOOL11 ~ 12 |
| TOOL(FUNCTIONS)13 ~ 14 |
| CONTROLLER15 ~ 20 |
| COST REDUCTION EXAMPLE21 ~ 22 |
| HANDY 2000 MANAGEMENT SOFTWARE ······23 ~ 24 |
| TOOLS 25 ~ 27 |
| CONTROLLERS28 |
| FRACER ARM29 ~ 30 |
| CABLES31 |
| ACCESSORIES32 ~ 34 |



[ISO5393]

The high level fastening quality required for critical areas is achieved with the advanced measuring capability and controlling performance of the Handy 2000 Lite plus manufactured based on ISO9001 to offer the highest quality









Performance inspection report

Traceability

The fastening performance of the nutrunner is evaluated with inspection equipment (indicator) that complies with the international standard ISO5393 and the inspection report is issued with each tool.



Excellent fastening accuracy



High level quality control

The fastening performance of 3% at Handy 2000 Lite plus is manufactured $6\sigma (3\sigma/\bar{x} = \pm 3\%)$ is guaranteed by according to ISO9001 and supplied the inspection equipment according to and serviced with the international ISO5393. standard level



High speed sampling and response

The torque and angle readings are monitored every 1/2000 second to control the target values.

Energy saving RoHS compliance

Earth and Environmentally-friendly products. Estic's electric handheld nutrunners support future production in harmony with the environment.



Energy saving tool

Improvement in energy efficiency is a must to reduce CO₂ emissions which promote global warming. The electric handheld nutrunner "Handy 2000 Lite plus" consumes about 1/20 the energy in comparison with compressed air powered pneumatic nutrunners. It is an energy saving tool that allows operation while reducing negative impacts to the environment.



Clean and quiet working environment

Handy 2000 Lite plus does not generate such oil mist or noise as generated by pneumatic nutrunners, and thus constantly provides clean and quiet working environment.



RoHS compliance

Handy 2000 Lite plus conforms to RoHS directive of EU (European Union) stipulating abolition and alternatives of the hazardous materials such as lead with the consideration to environmental friendliness.

[What is RoHS Directive?]

RoHS is the acronym for Restriction of the use of certain Hazardous Substances in electrical and electronic equipment, and the restriction is applied by European Union (EU) to 6 substances of lead, mercury, cadmium, hexavalent chrome, PBB (polybrominated biphenyl), and PBDE (Polybrominated diphenyl ether) in electric and electronic equipment marketed in EU.

TRANSDUCERIZED ELECTRIC HANDHELD NUTRUNNER

Titanium alloy angle head

The angle head made of titanium featuring light weight materials and high tensile strength reduces the operator's load during fastening and provides high durability.

Standard option



Ball plunger




Long switch lever (EH2-LS02)



Short switch lever (EH2-LS01)

EH2-R1020-A

%Full scale

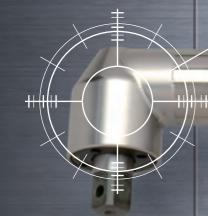

ANGLE TOOL

Lightweight and high speed motor


The lightweight motor is used to reduce the burden to the operator from the tool weight during operation. The high speed motor is used to improve the productivity.


STRAIGHT TOOL



1 Involute spline

Allows various applications including multiple spindle configuration and mounting on an assisting arm. The flanged spindle is provided with the high torque model.

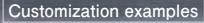

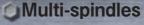



Assisting arm



Crow foot gear



Flush socket

EH2-R1016-S **%Full scale**




Optional involute spline

Allows various applications including multiple spindle configuration and mounting on an assisting arm.




A rail guide is used for various applications such as hanging fixture to mount easily and securely.

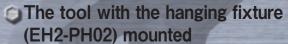



PISTOL TOOL

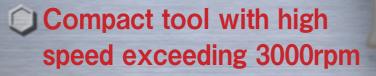

Though compact and lightweight, the high maximum speed of 3075 rpm (EH2-H0015-P, EH2-H1030-P) is achieved for ease of use and high productivity.

50Nm electric pulse model (EH2-P1050-P)





An omnidirectional confirmation window with excellent visibility is used to make the operating condition visible at any time.



Ergonomically suited grip

The pistol type grip is used for operators to easily grip and prevent fatigue during long period operation.





EH2-R1016-P **Full scale

ELECTRIC HANDHELD NUTRUNNER

LOW TORQUE ADAPTATION TOOL

Lever Start Type



Push the lever to activate the tool, and release it to stop.

Push-to-Start Type



Push the bit onto the screw to activate the tool, and release it to stop.

Critical security parts require traceability, whether the torque is small or large. This tool helps you to achieve better quality with automobile industry products, including sensors, cables, and airbags, as well as products for the aircraft and home electronics industries.



Bit Holder

Slide-and-latch – Easily fit and remove the bit holder.

Two options to activate the tool – Lever start and push-to-start.

EH2-R0005-SP (Push-to-start type)

**Full scale

Model: EH2-R0005-SCA (I) Small No.: 903022 Rated Coutput: Solvy Make William 900 (E)

EH2-R0005-SC (Connector start type)

*Full scale

Pistol tool (EH2-R0005-P)



Removable Flange

Remove the flange when using a single spindle. Utilize this feature together with the rail guide for use in various applications.

Rail Guide

Rail guide employed for a multiple-spindle unit configuration and assist arms. Same horizontal type hanging hook can be used as pistol models.

ELECTRIC HAND NUTRUNNER

TOOL(FUNCTIONS)

ANGLE TOOL, STRAIGHT TOOL & PISTOL TOOL

Advanced functions support usability, accuracy and durability during fastening












To inform the operator of the operating conditions in 7 colors with the LED lamps such as for OK/NG of fastening results (OK: green & NG: red or yellow) and fastening direction (forward rotation: blue & reverse rotation: purple), etc. The lamps are visible at any angle regardless of the posture of the operator.

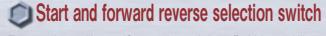

The start trigger utilizes an IC contactless switch to offer high operability and reliability. The forward reverse selection switch provides reset function in addition to change the rotating direction. The push turn system that can be operated by a single hand is incorporated for the pistol tool.



Protection handle





The shock resistant handle is mounted to the aluminum alloy frame to minimize the impact if accidently dropped. The ergonomically designed grip allows easy operation and reduces operator burden during extended use.




The connector to connect the tool and the cable is installed in the frame inside the handle. It provides excellent durability against drop or impact.






The environmentally friendly high resolution resolver detects the angle used to control the servo-motor feed-back process. The resolution of 2048 or greater per rotation assures highly accurate speed control and fastening rotational angle.

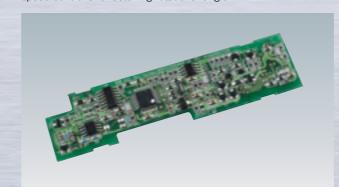

Intelligent ID

The controller can be quickly setup when a tool is connected. An ID memory chip storing torque calibration value, gear ratio, and tool model is embedded into the tool. The records for frequency of repair and fastening counts are helpful for maintenance control.

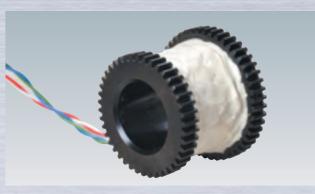

Torque sensor

The strain gauge type torque transducer is built in to detect the torque. Gauges at 8 points and external disturbance self-cancellation function make the high accuracy torque detection possible.



Reduction gear

The compact design of the high power planetary gear assures excellent durability.

10 Lite **10/U5** *

Large size 7 segmented LEDs are used for the display panel.OK and NG are indicated in an understandable way with green and red respectively



USB Flash drive

Export Tightening result file

Export/Import program file

Centralized wiring on the bottom face

I/O terminals are concentrated on the bottom face to help package the wiring and save space.

Connector for the tool cable

The system is automatically recognized when the tool is connected.

Connector for the AC power supply

Connector for AC100V and AC200V power supply cables

Network connector

Used to control the multi-spindle, and Socket tray.

Earth leakage breaker for the main power supply

The earth leakage breaker conforming to various international standards

RELAY/EXT IN

Relay (Output 2)



ETHERNET

RJ45 connector to connect with

CHK CN1

Connector for monitor output.

CHK CN2

Connector for monitor output.

FIEDLBUS (Option)

EtherNet/IP, DeviceNet, Profinet, Profibus and CC-Link are available as an option.

RS-232C (COM1)

ESTIC Management Software, Barcode scanner, ASCII data out

REMOTE I/O (Option)

Remote I/O (Input 16/Output 16)

PANEL

RS-422 to communicate with HMI.

I/O (Option)

I/O (Input 16/Output 16)

DC OUT

24VDC 1A

Basic specifications for the controller


- Fastening methods : Torque control, Torque control Angle monitoring, Angle control, Torque or Angle control, Torque and Angle control, Yield control, Yield Angle control, Inspection torque control, Reverse Angle control
- Fastening mode Selectable between Direct mode (Continuous fastening) and Pulse mode (Electrical pulse fastening). * Some models have Pulse mode only or Direct mode only. Please see the details on page 25, 26 and 27.
- No. of the fastening channel setting
- Max. 33,000 records (Numbers of the records which can be stored in the controller varies depending on the items selected for fastening history)
- Torque curve history : Max. 30 records (OK Fastening: 20 records, NG Fastening: 10 records)
- Ethernet : Various protocols such as ESTIC protocol (ESTIC Management Software, ESTIC Data Logger), Open Protocol,
- FieldBus DeviceNet, EtherNet/IP, Profinet, Profibus, CC-Link are available as an option.
- : As the option. According to user requirement, Adding these options for necessary environment.
- Program/system parameter, Allocation of I/O, fastening Results, Fastening Result History, System Error History(FLASH-ROM Back-up) Torque Curve History(Battery Back-up)
 - Parameter in USB memory.
- Batch counter function : nx OK and nx NG output
- W 60mm H 316mm D 262mm
- : 7.7kg

CONTROLLER(FUNCTIONS)

Versatile functions are included to further enhance fastening efficiency

Multi channels

Tightening, loosening and retightening are necessary to detect the fitting or crossthread condition in the bolt fastening operation. You can avoid the troublesome channel change operation and simply carry out the fastening in continuity by continuously defining the necessary fastening channels as one multi channel system.

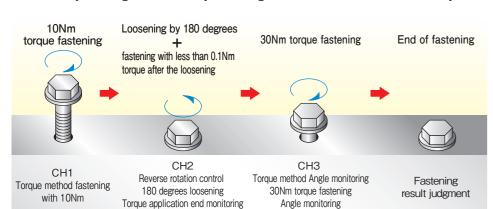

Multi channel No. designation

| M | C 1 | | | | |
|-------|--------------|--|--|--|--|
| STAGE | CH(channels) | | | | |
| 1 | 1 | | | | |
| 2 | 2 | | | | |
| 3 | 3 | | | | |
| + | | | | | |

The maximum 99 channels including the multi channels and normal channels can be set. The set multi channels can perform as one CH in the job control function.


Fastening result OK



ELECTRIC HANDHELD NUTRUNNER

Job control function

A convenient function to permit the integrated control in the various torque fastening operation. The max. 99 jobs can be controlled with the function. All of the channels and fastening operations can be programmed with a maximum of 30 steps per job.

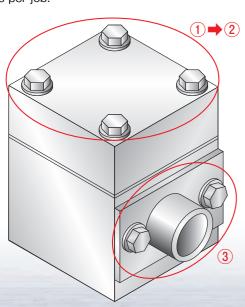

For instance, when 4 locations must be temporarily and then fully fastened with gaskets installed at the 4 locations, and then parts to be installed at two locations

Operation flow

Operation start

CH1 temporary fastening with 20Nm at 4 locations

CH2 full fastening with 40Nm at the 4 locations


CH3 fastening with 18Nm at 2 locations

End of the operation

A series of steps is programmed as a JOB parameter in the job control function so that you may execute a job by designating the job number and the job end may be informed with the JOB OK output message.

■ Job control function

Designation of Job numbers

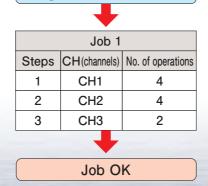

High speed seating function

When fastening a screw at high rotation speed with a low target torque, the servo motor cannot stop promptly. This creates excess torque (overshoot), causing the fastening torque to be uneven and the workpiece to be damaged. As a solution to this, Handy 2000 Lite plus employs overshoot reduction software to make your fastening faster and more secure.



Simplified PLC functions

The controller is equipped with a simplified sequence control function with AND, OR. and timer control. Logic programs can be set to select the ON lamps or set off a buzzer for a certain length of time depending on the fastening result of OK or NG.





Free allocation function

The fastening result data stored in the controller and outputted on the external unit after every fastening can be freely selected. The function to select only necessary items can make the data size smaller.

The control signals for the system control connectors (PIO), remote I/O, relay output, and no voltage contact input can also be freely allocated.




Multi-spindles function

A maximum of 10 spindles can be operated for synchronous fastening without the help of external controls. The synchronous fastening allows for shorter operating times.



Compatible with bar code readers


A bar code reader can be directly connected with the controller. The loaded data can be reflected in the fastening result. The fastening channel and job can be changed based on the loaded data when the identifier function is in use.

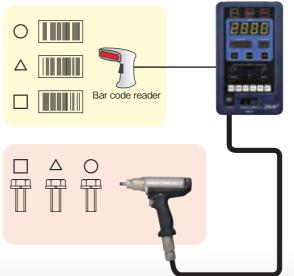

By reading bar codes


- · Storage/transmission of vehicle number + fastening data
- · Change of the model and operation to be carried out


CONTROLLER(SYSTEM CONFIGURATION)

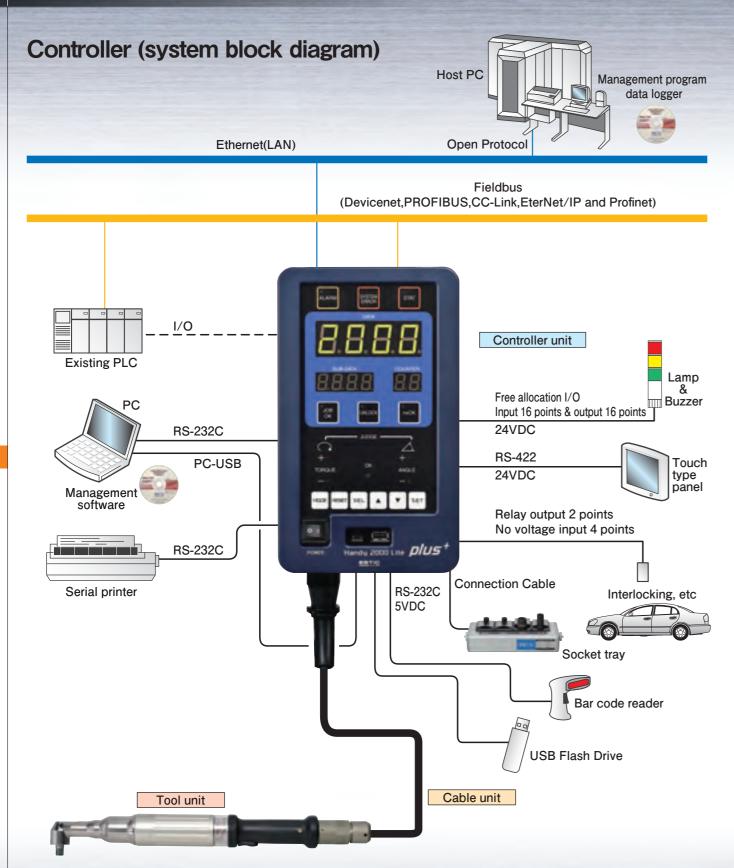


Multi-spindles connection Channels can be freely selected depending on the vehicle identification number. The fastening condition is set on the master controller and sent to the local controllers via NET cables for each fastening. Touch type panel Vehicle identification number (serial number) Bar code reader


Expanding network connection The fastening results for up to 50 units* can be compiled via the hub unit on ETHERNET. This wire saving connection can be used for the channel setting and interlocking from the outside with the use of FieldBus.

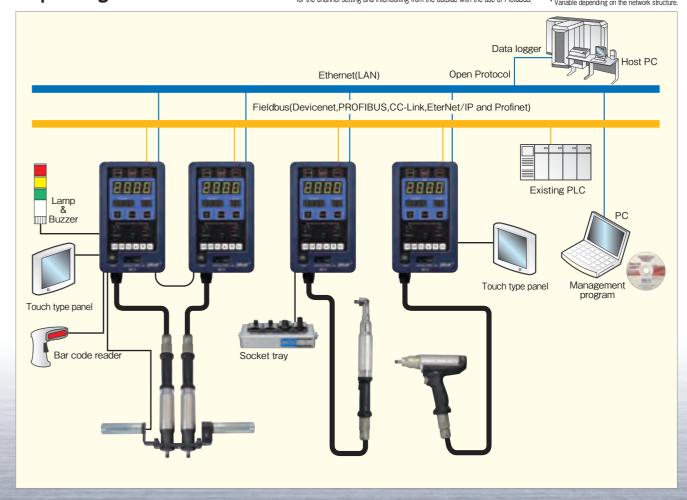

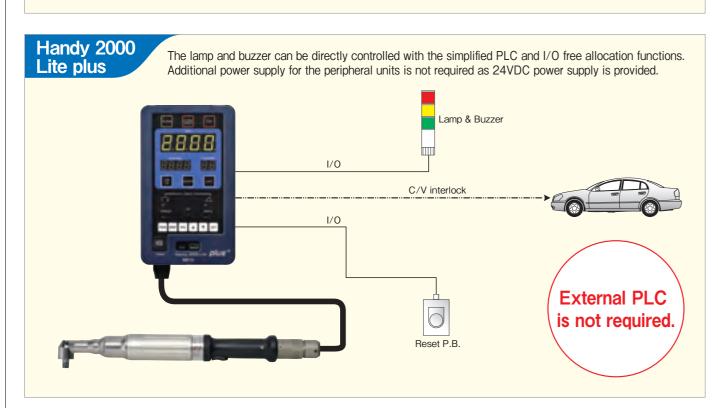

Data control + Interlock control

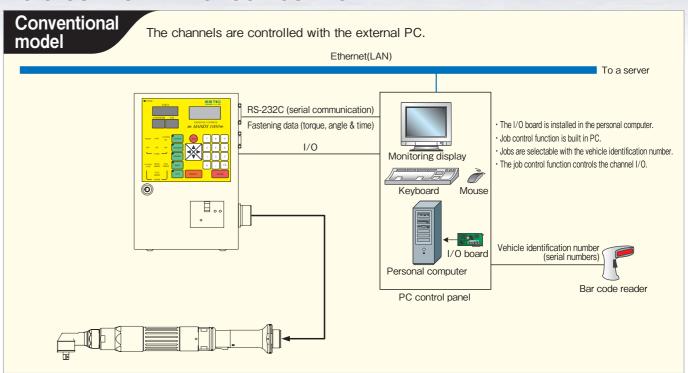

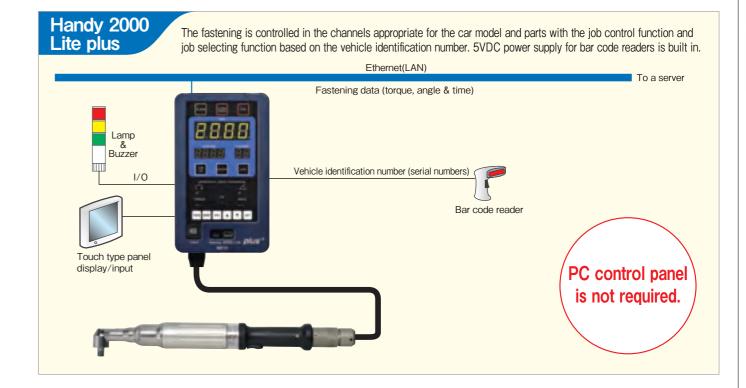

DUCTION EXAMPLE WITH THE NEW FUNCTIONS

21

Handy 2000 Management Software is a

Functions to be set

Parameters can be loaded from the controller, written into the controller, stored


and printed. The copy function is provided to help with quick start-ups.

(

ELECTRIC HANDHELD NUTRUNNER

History function


Fastening results, torque curves and system error data recorded in the controller can be loaded, displayed and printed with the function. Data is stored in CSV file format and can easily be imported into spreadsheets.

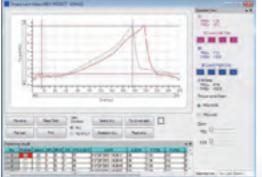


Torque curve data

Proper Planeton Security (1998) John Son, John Son, Help (1998) John Son

Program parameters

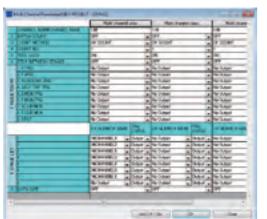


Multi channel parameter

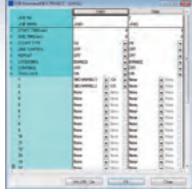

Fastening job setting

The simplified PLC functions allow ladder logic creation, monitoring, and storage.

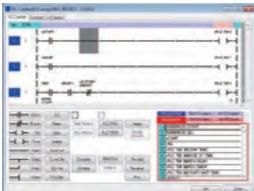


PLC ladder & I/O allocation

Formular Control of the Control of t

Statistics function

Monitoring function


The latest fastening results and torque curve data stored in the controller can be displayed and printed. The data can be automatically or manually stored in CSV file format.

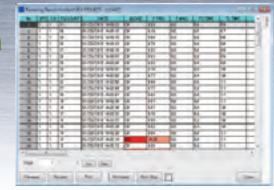

Fastening results displayed on the monitor screen.

Allocation function

Allocation of virtual I/O items in PIO (IN), PIO (OUT), RELAY/EXTIN, remote I/O units, allocation of items added to the fastening result, and allocation of data including the related data in Fieldbus I/O unit are possible.

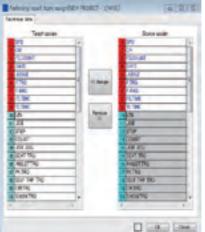

Allocation of fastening result items

Con



Fieldbus I/O allocation

Three types of interface connections are available (RS-232C, USB and ETHERNET)

RS-232C and USB are available for quick and easy connection for a single system. Ethernet is available to connect to a single and multiple systems.

Verifying function

The verify function is available to compare a saved program file with the program file currently running in the system. This allows for added file control and change tracking.

Maintenance functions

The maintenance function allows I/O monitoring, output signal forcing, torque and angle monitoring as well as displaying various tool data.

Access limitation function

To prevent the unauthorized use with the access control using password.

(Compatible OS)

Windows10 32bit/64bit Windows8/8.1 32bit/64bit Windows7, SP1 32bit/64bit WindowsVista, SP1.2 32bit WindowsXP, SP3 32bit

Handy 2000 series

A: Angle type
S: Straight type
SL:Straight type, lever start type
SP:Straight type, push-to-start type SC:Straight type, connector start type

P: Pistol type PH: Pistol type with involute spline

Output shaft

Blank: Through Hole (PP): Pin Plunger (BP): Ball Plunger

**Ball/Pin Plunger is available on 9.5mm(3/8") and 12.7mm(1/2") and Angle/Pistol tool.

Max. rated torque

Torque in Nm (3 digits)

Motor power

0: 50W

1: 100W 2: 200W-1

3: 200W-2



How to read the model numbers

EH2 - R1 020 - A (PP)



PISTOL TOOL

| Model | Tighteni | ng mode | Torque | e range | Max. spe | ed (rpm) | Outpu | t shaft | We | ight | Length |
|--------------|----------|----------------|--------|-----------|--------------|------------|---------|---------|------|------|--------|
| Model | Direct | Electric Pulse | (N m) | (ft lbs) | 200V input*3 | 100V input | (mm) | (inch) | (kg) | (lb) | (mm) |
| EH2-R0005-P | 0 | 0 | 1~5 | 0.7~3.7 | 2543 | 1695 | 9.5 sq | 3/8 | 1.1 | 2.4 | 202 |
| EH2-R0010-P | 0 | 0 | 2~10 | 1.5~7.4 | 1415 | 943 | 9.5 sq | 3/8 | 1.1 | 2.4 | 202 |
| EH2-H0015-P | | O*2 | 3~15 | 2.2~11.1 | 3075 | 2000 | 9.5 sq | 3/8 | 1.2 | 2.6 | 204 |
| EH2-R1016-P | 0 | 0 | 3.2~16 | 2.4~11.8 | 1871 | 1247 | 9.5 sq | 3/8 | 1.4 | 3.1 | 220 |
| EH2-R1016-PH | 0 | 0 | 3.2~16 | 2.4~11.8 | 1871 | 1247 | 9.5 sq | 3/8 | 1.4 | 3.1 | 220 |
| EH2-R1020-P | 0 | 0 | 4~20 | 3~14.8 | 1580 | 1053 | 9.5 sq | 3/8 | 1.4 | 3.1 | 220 |
| EH2-R1020-PH | 0 | 0 | 4~20 | 3~14.8 | 1580 | 1053 | 9.5 sq | 3/8 | 1.4 | 3.1 | 220 |
| EH2-H1030-P | | O*2 | 6~30 | 4.4~22.1 | 3075 | 2000 | 9.5 sq | 3/8 | 1.4 | 3.1 | 223 |
| EH2-P1050-P | | O*2 | 10~50 | 7.4~36.9 | 1580 | 1053 | 12.7 sq | 1/2 | 1.7 | 3.7 | 248 |
| EH2-S1050-P | | O*2 | 10~50 | 7.4~36.9 | 2121 | 1400 | 12.7 sq | 1/2 | 1.7 | 3.7 | 252 |
| EH2-T0050-P | | O*2 | 10~50 | 7.4~36.9 | 2121 | 1400 | 12.7 sq | 1/2 | 1.5 | 3.3 | 223 |
| EH2-R2085-PH | O*1 | | 17~85 | 12.5~62.7 | 605 | 403 | 12.7 sq | 1/2 | 2.7 | 6 | 335 |
| EH2-R2120-PH | O*1 | | 24~120 | 17.7~88.6 | 438 | 292 | 12.7 sq | 1/2 | 2.8 | 6.2 | 335 |

^{*1} Direct driven only (No Electric Pulse driven available), Please make sure to use together with a reaction bar/arm.
*2 Electric Pulse driven only (No Direct driven available)
*3 Max. speed is available only on parameter "SP.HIGH SPD"

EH2-R3450-A, EH2-R3600-A







EH2-R2050-A

EH2-R1020-A



ANGLE TOOL

| Model | Tighteni | ing mode | Torque | Torque range | | ed (rpm) | Output shaft | | Weight | | Length |
|-------------|----------|----------------|---------|--------------|--------------|------------|--------------|--------|--------|------|--------|
| Model | Direct | Electric Pulse | (N m) | (ft lbs) | 200V input*3 | 100V input | (mm) | (inch) | (kg) | (lb) | (mm) |
| EH2-R1020-A | 0 | 0 | 4~20 | 3~14.8 | 1541 | 1027 | 9.5 sq | 3/8 | 1.4 | 3.1 | 386 |
| EH2-R1030-A | 0 | 0 | 6~30 | 4.4~22.1 | 1053 | 702 | 9.5 sq | 3/8 | 1.5 | 3.3 | 393 |
| EH2-T0040-A | | O*2 | 8~40 | 5.9~29.5 | 1885 | 1257 | 9.5 sq | 3/8 | 1.7 | 3.7 | 383 |
| EH2-H1070-A | | O*2 | 14~70 | 10.3~51.6 | 1500 | 1000 | 12.7 sq | 1/2 | 2.0 | 4.4 | 426 |
| EH2-R2050-A | 0 | 0 | 10~50 | 7.4~36.9 | 1169 | 779 | 9.5 sq | 3/8 | 2.1 | 4.6 | 434 |
| EH2-R2080-A | 0 | 0 | 16~80 | 11.8~59 | 720 | 480 | 12.7 sq | 1/2 | 2.5 | 5.5 | 466 |
| EH2-H2100-A | | O*2 | 20~100 | 14.8~73.8 | 1125 | 750 | 12.7 sq | 1/2 | 2.8 | 5.5 | 500 |
| EH2-R2120-A | 0 | 0 | 24~120 | 17.7~88.6 | 404 | 269 | 12.7 sq | 1/2 | 3.0 | 6.6 | 514 |
| EH2-H2140-A | | O*2 | 28~140 | 20.7~103.3 | 753 | 500 | 19.0 sq | 3/4 | 3.3 | 6.6 | 524 |
| EH2-R2180-A | 0 | 0 | 36~180 | 26.6~132.8 | 276 | 184 | 19.0 sq | 3/4 | 3.2 | 7.1 | 538 |
| EH2-R3270-A | O*1 | | 54~270 | 39.9~199.3 | 265 | 132 | 19.0 sq | 3/4 | 7.7 | 17 | 625 |
| EH2-R3370-A | O*1 | | 74~370 | 54.6~273 | 207 | 103 | 19.0 sq | 3/4 | 7.7 | 17 | 625 |
| EH2-R3450-A | O*1 | | 90~450 | 66.4~332.1 | 172 | 86 | 25.4 sq | 1 | 10.5 | 23.1 | 659 |
| EH2-R3600-A | O*1 | | 120~600 | 88.6~442.8 | 126 | 63 | 25.4 sq | 1 | 10.5 | 23.1 | 659 |

*1 Direct driven only (No Electric Pulse driven available), Please make sure to use together with a reaction bar/arm.
*2 Electric Pulse driven only (No Direct driven available)
*3 Max. speed is available only on parameter "SP.HIGH SPD" (EH2-R3***-* does not have the boost mode)

ELECTRIC HANDHELD NUTRUNNER

ELECTRIC HANDHELD NUTRUNNER



27





EH2-R3200-S, EH2-R3260-S



EH2-R2035-S



EH2-R1016-S



EH2-R0005-SL



EH2-R0005-SC

STRAIGHT TOOL

| Model | Tighteni | ng mode | Torque | range | Max. spee | ed (rpm) | Outpu | t shaft | Weight | | Length |
|--------------|----------|----------------|--------|------------|--------------|------------|----------|---------|--------|------|--------|
| Model | Direct | Electric Pulse | (N m) | (ft lbs) | 200V input*2 | 100V input | (mm) | (inch) | (kg) | (lb) | (mm) |
| EH2-R0005-SC | 0 | 0 | 1~5 | 0.7~3.7 | 2543 | 1695 | 9.5 sq | 3/8 | 1.1 | 2.4 | 228 |
| EH2-R0005-SL | 0 | 0 | 1~5 | 0.7~3.7 | 2543 | 1695 | 6.35 Hex | 1/4 | 1.2 | 2.6 | 296 |
| EH2-R0005-SP | 0 | 0 | 1~5 | 0.7~3.7 | 2543 | 1695 | 6.35 Hex | 1/4 | 1.2 | 2.6 | 296 |
| EH2-R0010-SC | \circ | 0 | 2~10 | 1.5~7.4 | 1415 | 943 | 9.5 sq | 3/8 | 1.1 | 2.4 | 228 |
| EH2-R0010-SL | 0 | 0 | 2~10 | 1.5~7.4 | 1415 | 943 | 6.35 Hex | 1/4 | 1.2 | 2.6 | 296 |
| EH2-R0010-SP | 0 | 0 | 2~10 | 1.5~7.4 | 1415 | 943 | 6.35 Hex | 1/4 | 1.2 | 2.6 | 296 |
| EH2-R1016-S | \circ | 0 | 3.2~16 | 2.4~11.8 | 1871 | 1247 | 9.5 sq | 3/8 | 1.3 | 2.9 | 344 |
| EH2-R1020-S | 0 | 0 | 4~20 | 3~14.8 | 1580 | 1053 | 9.5 sq | 3/8 | 1.3 | 2.9 | 344 |
| EH2-R2035-S | 0 | 0 | 7~35 | 5.2~25.8 | 1754 | 1169 | 9.5 sq | 3/8 | 2.0 | 4.4 | 406 |
| EH2-R2055-S | 0 | 0 | 11~55 | 8.1~40.6 | 1080 | 720 | 12.7 sq | 1/2 | 2.2 | 4.9 | 431 |
| EH2-R2085-S | 0 | 0 | 17~85 | 12.5~62.7 | 605 | 403 | 12.7 sq | 1/2 | 2.4 | 5.3 | 448 |
| EH2-R2120-S | 0 | 0 | 24~120 | 17.7~88.6 | 438 | 292 | 12.7 sq | 1/2 | 2.5 | 5.5 | 448 |
| EH2-R3200-S | ○*1 | | 40~200 | 29.5~147.6 | 397 | 198 | 19.0 sq | 3/4 | 6.0 | 13.2 | 547.5 |
| EH2-R3260-S | ○*1 | | 52~260 | 38.4~191.9 | 311 | 155 | 19.0 sq | 3/4 | 6.0 | 13.2 | 547.5 |
| EH2-R3320-S | ○*1 | | 64~320 | 47.2~236.2 | 258 | 129 | 19.0 sq | 3/4 | 6.5 | 14.3 | 547.5 |
| EH2-R3420-S | ○*1 | | 84~420 | 62~310 | 189 | 94 | 19.0 sq | 3/4 | 6.5 | 14.3 | 547.5 |


^{*1} Direct driven only (No Electric Pulse driven available), Please make sure to use together with a reaction bar/arm.
*2 Max. speed is available only on parameter "SP.HIGH SPD"

Download CAD data for detailed outline drawings. https://www.estic2.com/caddata/

Controller models and options


| Model | | Fieldbus option | | | | 1/0 0 | option | Power source | |
|-----------------|-----------|-----------------|---------|-------------|----------|-----------|-----------|--------------|--|
| Wodel | DeviceNet | Profibus | CC-Link | Ethernet/IP | Profinet | Remote IO | Extend IO | (V) | |
| EH2-HT45-000NNN | | | | | | | | | |
| EH2-HT45-000RNN | | | | | | • | | | |
| EH2-HT45-000NNP | | | | | | | • | | |
| EH2-HT45-000RNP | | | | | | • | • | | |
| EH2-HT45-000NDN | • | | | | | | | | |
| EH2-HT45-000RDN | • | | | | | • | | | |
| EH2-HT45-000NDP | • | | | | | | • | | |
| EH2-HT45-000RDP | • | | | | | • | • | | |
| EH2-HT45-000NPN | | • | | | | | | | |
| EH2-HT45-000RPN | | • | | | | • | | | |
| EH2-HT45-000NPP | | • | | | | | • | | |
| EH2-HT45-000RPP | | • | | | | • | • | Single Phase | |
| EH2-HT45-000NCN | | | • | | | | | 100 - 230VAC | |
| EH2-HT45-000RCN | | | • | | | • | | | |
| EH2-HT45-000NCP | | | • | | | | • | | |
| EH2-HT45-000RCP | | | • | | | • | • | | |
| EH2-HT45-000NWN | | | | • | | | | | |
| EH2-HT45-000RWN | | | | • | | • | | | |
| EH2-HT45-000NWP | | | | • | | | • | | |
| EH2-HT45-000RWP | | | | • | | • | • | | |
| EH2-HT45-000NTN | | | | | • | | | | |
| EH2-HT45-000RTN | | | | | • | • | | | |
| EH2-HT45-000NTP | | | | | • | | • | | |
| EH2-HT45-000RTP | | | | | • | • | • | | |



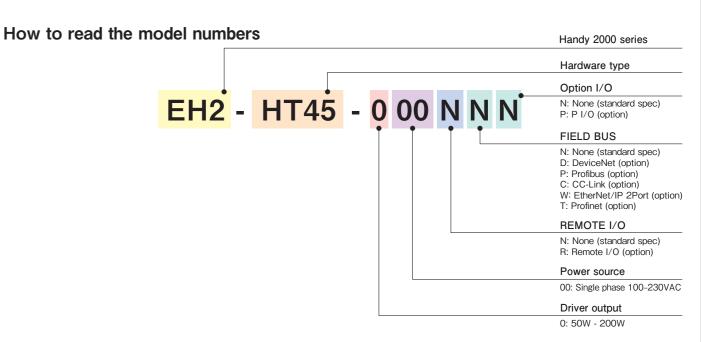


One of the new applications of Handy 2000 Lite plus is the "TRACER ARM". An Assisting Arm with Position Detection Function for Handy 2000 Lite plus!

- Eliminating operator errors! Eliminating reaction force! **■** Improving operating efficiency! ■ Simple Configuration!
- Handy 2000 Lite plus Tool Cable Trace Control Unit Rotary Grip Rotary Grip as the option. "TRACER ARM" is equipped with the functionality to detect the current position of ESTIC handheld tools on the assisting ARM (using the trace job function of Handy 2000 Lite plus Handy 2000 Lite plus NET Cable TCU Power Cable (DC24v) and the position data obtained from the trace control unit.)

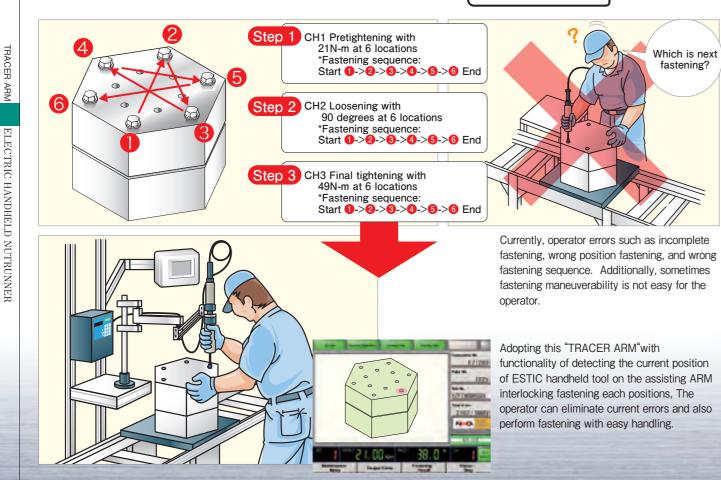


Work Flow Example

1 Read the bar code on the application, and fastening program is automatically selected.

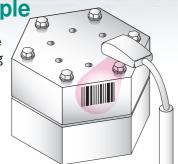

2 Model information selected by the Bar code reader is sent to the Touch screen, and fastening position is

displayed in a pink circle. *The application image is pre registered in the Touch screen

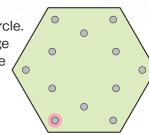

- 3 Touch screen guides the Operator to the position to be fastened next. By following the Touch screen, Operator can complete sequenced fastening.
- 4 Fastening Data (Fastening results) can be stored in the Controller.
- 5 Fastening Data (Fastening results) can be sent to the plant's server as well.

ITRACER ARM SYSTEM CONFIGURATION ITEMS LIST

| | Arm Model | EH2-TA0505-*-AT1 | EH2-TA0505-*-AT1G | EH2-TA0505-*-AT2 | EH2-TA0505-*-AT2G | EH2-TH0505-*-AT3 | EH2-TH0505-*-AT3G | EH2-TH0505-*-AT4 | EH2-TH0505-*-AT4G |
|----|--|---|--|----------------------------|--|----------------------|--|---|--|
| | | | with Rotating grip | | with Rotating grip | | with Rotating grip | | with Rotating grip |
| 1 | Applicable Tool Model | EH2-R0005-SL/SP EH2-R0010-SL/SP | EH2-R0005-SC EH2-R0010-SC | EH2-R1016-S EH2-R1020-S | | EH2-R2035-S | | EH2-R2055-S EH2-R2085-S EH2-R2120-S | |
| 2 | Tool Cable | | | | EH2-CVS**-SS (p | lease see page 31) | | | |
| 3 | Rotating Grip | _ | EH2-RG01 (attachements for EH2-TA0505-*AT1G) | _ | EH2-RG02 (attachements for EH2-TA0505-*AT2G) | _ | EH2-RG03 (attachements for EH2-TA0505-*AT3G) | _ | EH2-RG04 (attachements for EH2-TA0505-*AT4G) |
| 4 | Cable for Rotating Grip (Rotating grip side) | _ | EH2-CVG1-001 (attachements for EH2-TA0505-*AT1G) | _ | EH2-CVG2-050 (attachements for EH2-TA0505-*AT2G) | _ | EH2-CVG2-050 (attachements for EH2-TA0505-*AT3G) | _ | EH2-CVG2-050 (attachements for EH2-TA0505-*AT4G) |
| 5 | Cable for Rotating Grip (Controllerl side) | _ | _ | _ | EH2-CVG3-003 (attachements for EH2-TA0505-*AT2G) | _ | EH2-CVG3-003 (attachements for EH2-TA0505-*AT3G) | _ | EH2-CVG3-003 (attachements for EH2-TA0505-*AT4G) |
| 6 | ELAY/EXT IN Connector (wired with EH2-CVG3-003) | - | _ | ı | EH2-FCN13-RL (attachements for EH2-TA0505-*AT2G) | _ | EH2-FCN13-RL (attachements for EH2-TA0505-*AT3G) | - | EH2-FCN13-RL (attachements for EH2-TA0505-*AT4G) |
| 7 | Resolver Cable | | | | EH2-CVR3-010 (1m), | EH2-CVR3-050 (5m) | | | |
| 8 | NET Cable | | | | EH2-CVNK-*** (p | lease see page 33) | | | |
| 9 | Trace Control Unit | | | EH2-T0 | CU-N (standard type), E | H2-TCU-E (with exten | ded I/O) | | |
| 10 | TCU Power cable | | EH2-CVDC-030 (attachements for Trace Control Unit) | | | | | | |
| 11 | Termination Resistor | | EH2-CNST (required 2 pieces) | | | | | | |
| 12 | TCU Bracket | | EH2-TCU-BRKT2 | | | | | | |
| 13 | Arm Mount Bracket | EH2-SAFM500 (for floor mounting) EH2-SAWM200 (for wall mounting) EH2-HAFM500 (for floor mounting) | | | | | | | |

Note: *mark in the arm model EH2-TA0505-* and EH2-TH0505-* is replaced with the symbol of operation type of the arm to complete the model number. R: Right arm type L: Left arm type

29

Highly durable molded connector with unique double shell construction

The cable is extremely durable and easy to handle with a high strength elastic aramid fiber core covered by a molded resin. The connector has a dual shell constructed from machined duralumin to assure a secure cable connection while maintaining flexibility.





Molded connector

Spiral Cable

List of the models

| Model | Length (m) | Outside diameter (mm) | Remarks |
|--------------|---------------|-----------------------|------------------------------------|
| EH2-CVS05-SS | 5 | | |
| EH2-CVS10-SS | 10 | | |
| EH2-CVS15-SS | 15 | | |
| EH2-CVS20-SS | 20 | | |
| EH2-CVS25-SS | 25 | 13.5 | * Made to order |
| EH2-CVS30-SS | 30 | 15.5 | |
| EH2-CVC03-SS | 1.5 | | Spiral Cable (Expanded length: 3m) |
| EH2-CVE05-SS | 5 | | |
| EH2-CVE10-SS | 10 | | Extension Cable |
| EH2-CVE15-SS | 15 | | |

Cable Adapter



Model

EH2-CVAD-L

EH2-CVAD-U



U Cable Adapter



Cable for bent 180 degrees

EH2-CVAD-L

EH2-CVAD-U Remarks Product name L Cable Adapter Cable for bent 90 degrees

Tool Accessories

Hanging fixture for the straight and angle type models







EH2-SB01

Hanging fixture for the pistol type models










EH2-PH02

| Model | Product name | Remarks |
|-----------|-------------------|--|
| EH2-SB01 | | For straight and angle tools (100 W type): Horizontal |
| ENRH-SB02 | | For straight and angle tools (200 W type): Horizontal |
| EH2-SH01 | Hanging fixture | For straight and angle tools: Vertical |
| EH2-PH01 | Haligilig lixture | For pistol tool: Horizontal/upside down |
| EH2-PH02 | | For pistol tool: Horizontal, For straight tool (50 W type): Horizontal |
| EH2-PH03 | | For pistol tool: Vertical |

Note: Please inquire for hanging fixture for tool type EH2-R3 series

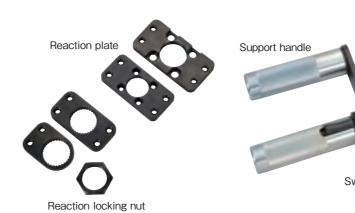



| Model | Product name | Remarks |
|------------|----------------------|---|
| ENRH-RP20S | | For 16/20 Nm straight and pistol tools (single) |
| ENRH-RP20W | Reaction plate | For 16/20 Nm straight and pistol tools |
| ENRH-RP35W | neaction plate | For 35Nm straight tool |
| ENRH-RP90W | | For 55/85/120Nm straight and pistol tools |
| ENRH-LNM30 | Reaction locking nut | For ENRH-PR20S/W |

| Model | Product name | Remarks |
|-----------|-----------------------|--|
| ENRH-SH01 | Support handle | |
| ENRH-SH02 | Switch handle | With direction selector switch |
| EH2-LS01 | Short switching lever | For straight and angle tools (100/200W type) |
| EH2-LS02 | Long switching lever | For straight and angle tools (100/200W type) |

Note: Not applicable for tool type EH2-R3 series

31

ELECTRIC HANDHELD NUTRUNNER



| Model | Product name | Remarks |
|----------|------------------|-----------------------------|
| EH2-PP01 | | For pistol tool EH2-P1050-P |
| EH2-PP02 | | For pistol tool 16/20Nm |
| EH2-PP03 | | For pistol tool 5/10Nm |
| EH2-PP04 | Protection cover | For pistol tool EH2-H0015-P |
| EH2-PP05 | | For pistol tool EH2-H1030-P |
| EH2-PP06 | | For pistol tool EH2-S1050-P |

Controller Accessories











EH2-CP02-UL1

EH2-CP02-CN1

EH2-CP02-UK1

EH2-CP02-EU1

EH2-CP02-TH1

| Model | Product name | Remarks | |
|--------------|--------------|---------------------------|--|
| EH2-CP02-UL1 | | For Japan and USA 100V 2m | |
| EH2-CP02-CN1 | | For China 200V 2m | |
| EH2-CP02-UK1 | Power cord | For UK 200V 2m | |
| EH2-CP02-EU1 | Power cord | For Europe 200V 2m | |
| EH2-CP02-TH1 | | For Thailand 200V 2m | |
| EH2-CP02-CE2 | | No plug 200V 2m | |



| Model | Product name | Remarks | |
|--------------|--------------|-------------------------------|--|
| EH2-FCN13-RL | | For relay/exit-in connection | |
| EH2-FCN04-RM | Connectors | For the remote I/O connection | |
| EH2-FCN05-DC | Connectors | For DC OUT connection | |
| ENRZ-CN36-EX | | For PIO | |
| | | | |



| Model | Product name | Remarks | |
|--------------|--------------|--|--|
| EH2-CVNK-005 | | For Multi spindle and Trace control unit: 0.5m | |
| EH2-CVNK-010 | NET cable | For Multi spindle and Trace control unit: 1m | |
| EH2-CVNK-030 | | For Multi spindle and Trace control unit: 3m | |
| EH2-CNST | Terminator | | |



| Model | Product name | Remarks |
|----------|-----------------|---------------------------------------|
| EH2-CF02 | Controller base | For vertically setting the controller |



Socket Tray



| Model | Product name | Remarks | |
|---------------|------------------|----------------------------|---|
| EH2-ST4 | Socket Tray | 4 sockets type (4 holders) | |
| EH2-ST8 | Socket Hay | 8 sockets type (8 holders) | |
| EH2-CVST-005 | Connection cable | 0.5m | An accessory of the socket tray |
| EH2-CVST2-010 | Expansion cable | 1m | Cable between Socket tray and Socket tray |
| EH2-CVST3-050 | | 5m | |
| EH2-CVST3-100 | Extension cable | 10m | Cable between Handy 2000 Lite plus controller and socket tray |
| EH2-CVST3-150 | | 15m | |

- •Socket Tray is a unit to assist selecting a right socket and a right tightening program in the process which requires to
- •Easy settings by Management software (version 7.12 or later) on PC.
- •Socket holder size is adjustable by an adjustable plate.
- •2 LEDs (Red, Green) indicate the status of each socket (Socket to pick, Socket is picked, Wrong socket is picked).
- •Maximum of 24 sockets can be connected.

Software



| Product name | Remarks | |
|-----------------------------------|------------------------------------|--|
| Handy 2000 Management software | Multi language (Japanese, English) | |
| | 1.5m | |
| Serial communication cable | 5m | |
| | 10m | |
| | Handy 2000 Management software | |

Data Logger: ESW-DL

- •The software works for connecting with combination of different series of controllers.
- •Data output by a controller is stored in a database and displayed on the screen.
- •Torque (Press) graph can be displayed on the screen as well.
- •Obtained tightening (pressing) data can be exported with excel format on schedule, and it makes easier for data analysis.
- •OS: Windows10, Windows8/8.1, Windows7 SP1